

It's a

Funky

Revolution

www.FunkyRevolution.Co.Uk

Copyright 2005 Eulights.com Ltd
All rights reserved. No part of this manual may be reproduced, in any form or by any means without prior written permission from Eulights.com Ltd

All information believed to be correct at time of printing.
For more information contact www.FunkyRevolution.co.uk

Funky
CLEVER-G



DMX 512

USER MANUAL

Part of the **Funky** Series

Introduction

Thank you for purchasing your new **Funky** effect light. A Stunning multi colour flower effect with 21 beams and 8 different gobos. High speed shutter and DMX512 control. The unit also boasts an in built microphone for sound to light operation.

Specification

Supply voltage: ac ~ 240V 50/60Hz

Lamp: EFP 12v 100w

Dimensions: 235 x 200 x 120mm

Weight: 5 Kgs

Operation

THIS PRODUCT IS INTENDED FOR PROFESSIONAL USE ONLY

This unit has been designed to use simple 'Plug n Play' operation. Simply connect the unit to a mains power supply. The unit should illuminate and any mirrors / Dishes should start to move.

The unit uses a built in microphone and relies upon a sense of sound to run automatically.

As with all effect lighting you should allow a cooling down period of at least 5 minutes in every 20 minutes.

The unit incorporates a hanging bracket. This enables you to mount the unit using a suitable clamp and safety cable.

Allow the unit to cool down before moving, as well as for safety this will also prolong the lamp life.

While the unit is in operation do not obstruct any of the air vents.

DMX 512 control gives the user the ability for total control over the gobo speed and selection.

Safety labels: These give warning of the hazard and should not be covered or moved.

Replacing Lamps

Replacing lamps is a simple operation which can be carried out by you. Follow these simple steps.

1. Disconnect the unit from the power supply and allow to cool
2. Remove the lamp cover using a suitable screwdriver
3. Locate and remove the defective lamp and safely discard
4. Take your new lamp in a piece of tissue, NEVER TOUCH halogen lamps with your fingers, the grease left behind will reduce your lamps life. Carefully insert the lamp into position
5. Check the lamp is securely in position and replace the lamp cover

Replacing Fuses

As well as the fuse in the plug socket you will also find a fuse on the panel to the rear of the unit. Follow the steps below to replace the fuse.

1. Disconnect the unit from the power supply and allow to cool
2. Remove the fuse cover using a suitable screwdriver
3. Remove the defective fuse, taking care of any fuse glass that may have broken free.
4. Ensure you have the correct fuse for your replacement, insert it into the fuse holder and then replace the fuse cover.

Cleaning

Cleaning your lights should be done periodically. This will ensure that your show remains as bright as the day you purchased it. You should clean the lenses and mirrors with a soft, damp cloth.

Servicing

Other than the lenses, mirrors, fuses and lamps there are no user serviceable parts in this unit. Any repairs must be carried out by a qualified technician, or returned to **Funky** for servicing.